

T300

TURBO

T300

TURBO

HIGH FLOW

 


Bobcat®

Service Manual

S/N 525411001 & Above

S/N 525511001 & Above

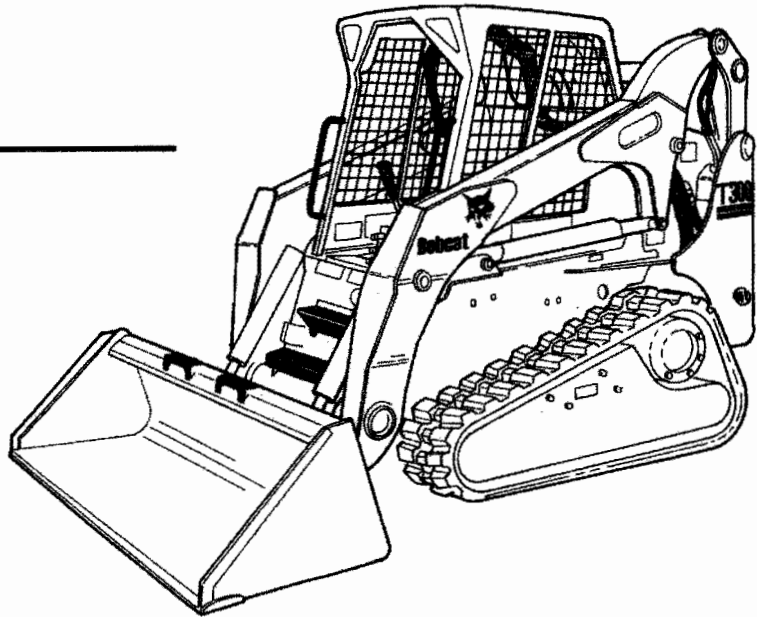

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

6902726 (10-03)



Printed in U.S.A.

© Bobcat Company 2003

MAINTENANCE SAFETY

! WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

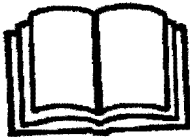

B-10731a

- ! Never service the Bobcat® Skid Steer Loader without instructions.

 
CORRECT

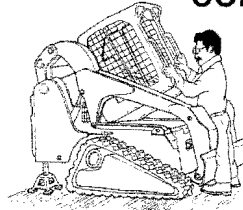

B-19110

- ! Use the correct procedure to lift to lower operator cab.

 
CORRECT

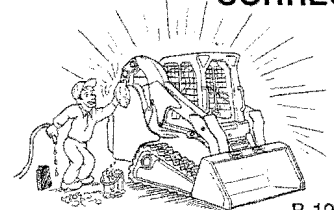

B-19109

- ! Cleaning and maintenance are required daily.

 
WRONG

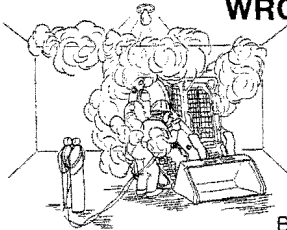

B-19108

- ! Have good ventilation when welding or grinding painted parts.
- ! Wear dust mask when grinding paintee parts. Toxic dust and gas can be produced.
- ! Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

 
WRONG

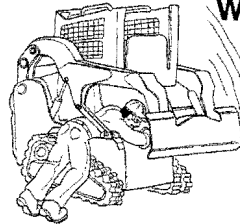

B-19111

- ! Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

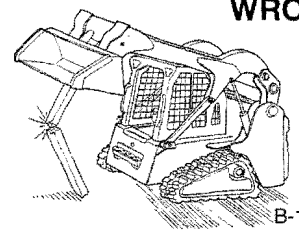

B-19107

- ! Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- ! Never modify equipment or add attachments not approved by

 
WRONG

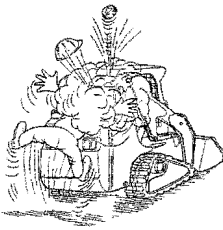

B-19106

- ! Stop, cool and clean engine of flammable materials before checking fluids.
- ! Never service or adjust loader with the engine running unless instructed to do so in the manual.
- ! Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ! Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

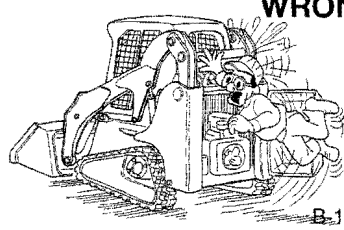

B-19105

- ! Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ! Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ! Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- ! Lead-acid batteries produce flammable and explosive gases.
- ! Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ! Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are not in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW24-0903



Bobcat®

ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS)	60-01	EVAPORATOR	80-01
AIR CLEANER	70-01	EVAPORATOR/HEATER UNIT.....	80-01
AIR CLEANER SERVICE	10-01	EXPANSION VALVE.....	80-01
AIR CONDITIONING SERVICE.....	80-01	FAN GEARBOX.....	10-01
AIR CONDITIONING SYSTEM FLOW	80-01	FLYWHEEL AND HOUSING	70-01
ALTERNATOR	60-01	FLYWHEEL RPM SENSOR	60-01
BASIC TROUBLESHOOTING	80-01	FRONT AUXILIARY HYD. COUPLER BLOCK	20-01
BATTERY.....	60-01	FUEL SYSTEM.....	10-01
BOBCAT CONTROLLER.....	60-01	FUEL TANK	50-01
BICS™ SYSTEM	60-01	GENERAL AIR CONDITIONING SERVICE	
BLOWER FAN	80-01	GUIDELINES.....	80-01
BOB-TACH.....	10-01, 50-01	HEATER COIL	80-01
BRAKE.....	40-01	HEATER VALVE	80-01
BUCKET POSITION VALVE	20-01	HYDRAULIC CONNECTION SPECIFICATIONS..	SPEC-01
CHARGE PRESSURE.....	30-01	HYDRAULIC CONTROL VALVE (ADVANCED	
COMPONENTS	80-01	CONTROL SYSTEM) (ACS)	20-01
COMPRESSOR.....	80-01	HYDRAULIC CONTROL VALVE (FOOT CONTROL)	20-01
CONDENSER.....	80-01	HYDRAULIC FILTER HOUSING.....	20-01
CONTROL HANDLE.....	50-01	HYDRAULIC FLUID RESERVOIR	20-01
CONTROL HANDLE (ADVANCED CONTROL		HYDRAULIC FLUID SPECIFICATIONS	SPEC-01
SYSTEM) (ACS) SELECTABLE HAND/FOOT		HYDRAULIC/HYDROSTATIC SYSTEM.....	10-01
CONTROL	50-01	HYDRAULIC PUMP	20-01
CONTROL HANDLE (SELECTABLE JOYSTICK		HYDRAULIC PUMP (CHARGE).....	20-01
CONTROL) (SJC).....	50-01	HYDRAULIC PUMP (HI FLOW)	20-01
CONTROL PANEL.....	50-01	HYDRAULIC PUMP (SELECTABLE JOYSTICK	
CONTROL PANEL (SELECTABLE JOYSTICK		CONTROL) (SJC).....	20-01
CONTROL) (SJC).....	50-01	HYDRAULIC PUMP (HI FLOW) (SELECTABLE	
CONTROL PEDALS	50-01	JOYSTICK CONTROL) (SJC)	20-01
CONTROL PEDALS (ACS)	50-01	HYDRAULIC/HYDROSTATIC FILTER	20-01
CONTROLLER (SELECTABLE JOYSTICK		HYDRAULIC SYSTEM INFORMATION	20-01
CONTROL) (SJC).....	60-01	HYDROSTATIC MOTOR	30-01
CONVERSIONS	SPEC-01	HYDROSTATIC MOTOR (SELECTABLE JOYSTICK	
COOLING FAN	70-01	CONTROL) (SJC).....	30-01
CYLINDER (LIFT).....	20-01	HYDROSTATIC PUMP	30-01
CYLINDER (POWER BOB-TACH).....	20-01	HYDROSTATIC SYSTEM INFORMATION	30-01
CYLINDER (TILT)	20-01	INSTRUMENT PANEL.....	60-01
DIAGNOSTICS	60-01	INSIDE ACCESS PANEL	50-01
DRIVE BELT	30-01	INSIDE ACCESS PANEL (SELECTABLE JOYSTICK	
DRIVE COMPONENTS	40-01	CONTROL) (SJC).....	50-01
ELECTRICAL/HYDRAULIC CONTROLS		LIFT AND TILT ACTUATOR CALIBRATION	
REFERENCE.....	60-01	(SELECTABLE JOYSTICK CONTROL) (SJC)	60-01
ELECTRICAL/HYDRAULIC CONTROLS		LIFT ARM	50-01
REFERENCE (SELECTABLE JOYSTICK		LIFT ARM BY-PASS CONTROL VALVE	20-01
CONTROL) (SJC).....	60-01	LIFT ARM SUPPORT DEVICE	10-01
ELECTRICAL SYSTEM INFORMATION	60-01	LIFTING AND BLOCKING THE LOADER.....	10-01
ENGINE	70-01	LIGHTS	60-01
ENGINE COOLING SYSTEM.....	10-01	LOADER SPECIFICATIONS	SPEC-01
ENGINE LUBRICATION SYSTEM.....	10-01	LUBRICATING THE LOADER.....	10-01
ENGINE SPECIFICATIONS	SPEC-01		
ENGINE SPEED CONTROL	70-01		
ENGINE SPEED CONTROL (SELECTABLE			
JOYSTICK CONTROL) (SJC).....	70-01		

ALPHABETICAL INDEX (CONT'D)

MAIN RELIEF VALVE (ACS)	20-01
MAIN RELIEF VALVE (FOOT CONTROL)	20-01
MAIN RELIEF VALVE (SELECTABLE JOYSTICK CONTROL) (SJC)	20-01
MUFFLER	70-01
OIL COOLER (SEAL TO CONNECT) (STC)	30-01
OPERATOR CAB	10-01, 50-01
OPERATOR SEAT	50-01
OPERATOR SEAT (SUSPENSION)	50-01
POWER BOB-TACH	10-01, 50-01
POWER BOB-TACH BLOCK	20-01
PRESSURE RELIEF VALVE	80-01
PRESSURE SWITCH	80-01
RADIATOR	70-01
REAR AUXILIARY DIVERTER VALVE	20-01
REAR DOOR	50-01
REAR GRILL	50-01
RECEIVER/DRIER	80-01
RECONDITIONING THE ENGINE	70-01
REGULAR MAINTENANCE	80-01
REMOTE START	10-01
SAFETY	80-01
SEAT BAR	50-01
SEAT BAR SENSOR	60-01
SERVICE PC (LAPTOP COMPUTER)	60-01
SERVICE SCHEDULE	10-01
SPEED SENSOR (SELECTABLE JOYSTICK CONTROL) (SJC)	60-01
STARTER	60-01
SYSTEM CHARGING AND RECLAMATION	80-01
SYSTEM TROUBLESHOOTING CHART	80-01
TEMPERATURE/PRESSURE	80-01
THERMOSTAT	80-01
TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
TOWING THE LOADER	10-01
TRACTION LOCK	60-01
TRANSPORTING THE BOBCAT LOADER	10-01
TROUBLESHOOTING	70-01

ACS- ADVANCED CONTROL SYSTEM

AHC- ADVANCED HAND CONTROL SYSTEM

BICS™-BOBCAT INTERLOCK CONTROL SYSTEM

CONTENTS

FOREWORD	ii
SAFETY INSTRUCTIONS	v
SERIAL NUMBER LOCATIONS	vii
DELIVERY REPORT	viii
BOBCAT LOADER IDENTIFICATION	ix
SAFETY AND MAINTENANCE	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM	30-01
DRIVE SYSTEM	40-01
MAIN FRAME	50-01
ELECTRICAL SYSTEM & ANALYSIS	60-01
ENGINE SERVICE	70-01
HEATING, VENTILATION, AIR CONDITIONING	80-01
SPECIFICATIONS	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**

HVAC

 
SPECIFICATIONS

FORWARD


This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, Starting procedure, daily checks, etc.

A general inspection of the following items must be made after the loader has had service or repair:


1. Check that the ROPS/FOPS (Including side screens) is in good condition and is not modified.

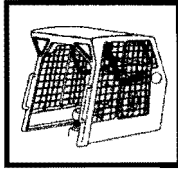

 
2. Check that ROPS mounting hardware is tightened and is Bobcat approved.

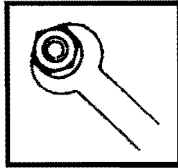

 
3. The seat belt must be correctly installed, functional and in good condition.

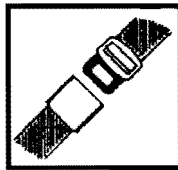

 4. The seat bar must be correctly adjusted, clean and lubricated.

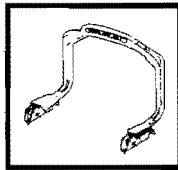

 
5. Check lift arm support device, replace if damaged.

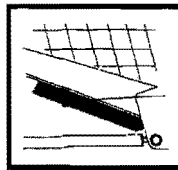

6. Machine signs must be legible and in the correct location.



 7. Steering levers and foot pedals must return to neutral.

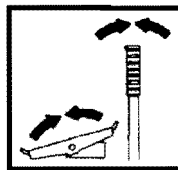


8. Check for correct function of the work lights




9. The parking brake must function correctly.



 
10. Enclosure door latches must open and close freely.

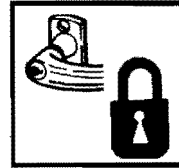

 
11. Bob-Tach wedges and linkages must function correctly and be in good condition.

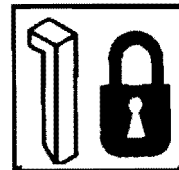

 
12. Safety treads must be in good condition.

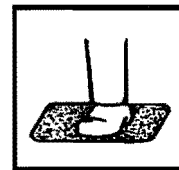

 
13. Check for correct function of indicator lamps (Optional on some models).

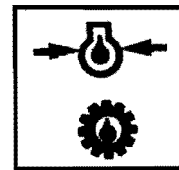

 
14. Check hydraulic fluid level, engine oil level and fuel supply.

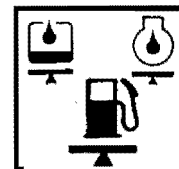

 
15. Inspect for fuel, oil or hydraulic fluid leaks.

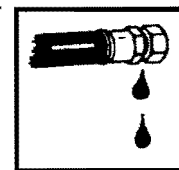

 
16. Lubricate the loader.

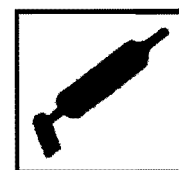

 
17. Check the condition of the battery and cables.

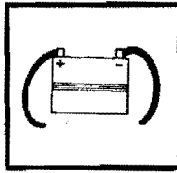

 22. Operate the loader and check all functions.

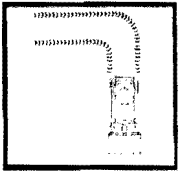

 
18. Inspect the air cleaner for damage or leaks. Check the condition of the element.

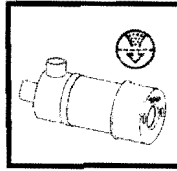


23. Check for any field modification not completed.



 
19. Check the electrical charging system.

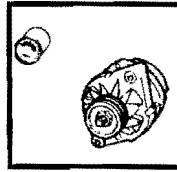

 
24. Check for correct function of the Bobcat Interlock Control System (BICS™) before the machine is returned to the customer.

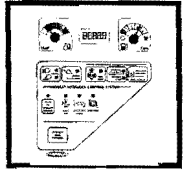

 
20. Check tracks for wear and tension.

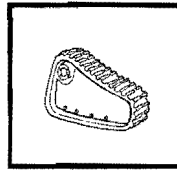

 25. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

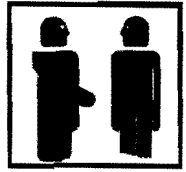

 21. Inspect for loose or broken parts or connections.

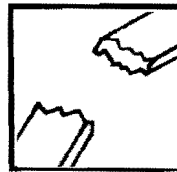

**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



Bobcat®

SAFETY INSTRUCTIONS



Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285



This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

The following publications provide information on the safe use and maintenance of the loader and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the loader gives operating information as well as routine maintenance and service procedures. It is a part of the loader and must stay with the machine when it is sold. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat loader dealer.
- The loader has machine signs (decals) which instruct on the safe operation and care. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat loader dealer.

- The loader has a plastic Operator's Handbook fastened to the operator cab. Its brief instructions are convenient to the operator. The Handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The EMI Safety Manual (available in Spanish) delivered with the loader gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work
- The Skid-Steer Loader Operator Training Course is available through your local dealer. This course is intended to provide rules and practices for correct operation of the Bobcat loader. The course is available in English and Spanish version.
- The Service Safety Training Course is available from your Bobcat dealer. This course provides information for safe and correct service procedures for Bobcat Skid-Steer loaders.
- The Bobcat Skid-Steer Loader Safety Video is available from your Bobcat Dealer.



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

SI05-0299

FIRE PREVENTION

The loader has several components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase fire hazard. The loader must be cleaned as often as necessary to avoid this accumulation. Flammable debris in the engine compartment is a fire hazard when the loader is parked with a hot engine.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the Bobcat loader where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on any engine which has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the loader and disconnect the battery before doing any welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the loader when welding. Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. No smoking!
- Use the procedure in the Operation & Maintenance Manual for connecting the battery.

- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler.
- Know where fire extinguishers and first aid kits are located and how to use them.

Figure 1




A fire extinguisher is available for your Bobcat dealer. The fire extinguisher can be installed in the location shown in [Figure 1]

SERIAL NUMBER LOCATION

Always use the serial number of the loader when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Loader Serial Number

 Figure 2

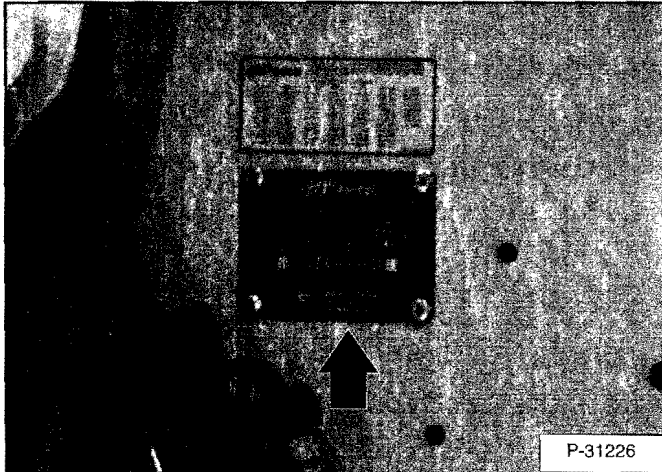

The loader serial number plate is located on the outside of the loader frame [Figure 2].


Explanation of loader Serial Number:

XXXX	XXXXX
Model 1.-Model/ Engine Combination	Model 2.-Production Sequence (Series)

1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the loader is produced.

Engine Serial Number

 Figure 3

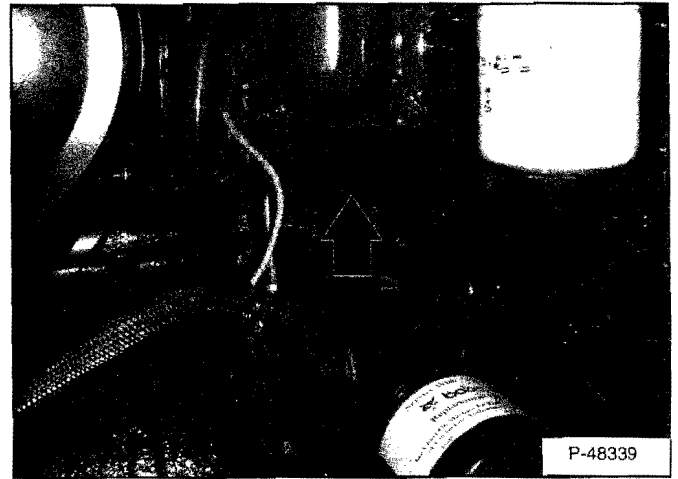

The engine serial number is located on the engine block [Figure 3].


 
Delivery Report

Figure 4

The diagram shows a form layout for a delivery report. It includes a title 'DELIVERY REPORT' at the top right, a 'WARNING' section on the left, and a large text area on the right. A reference number 'B-16315' is located at the bottom right of the form.

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 4].

 LOADER IDENTIFICATION

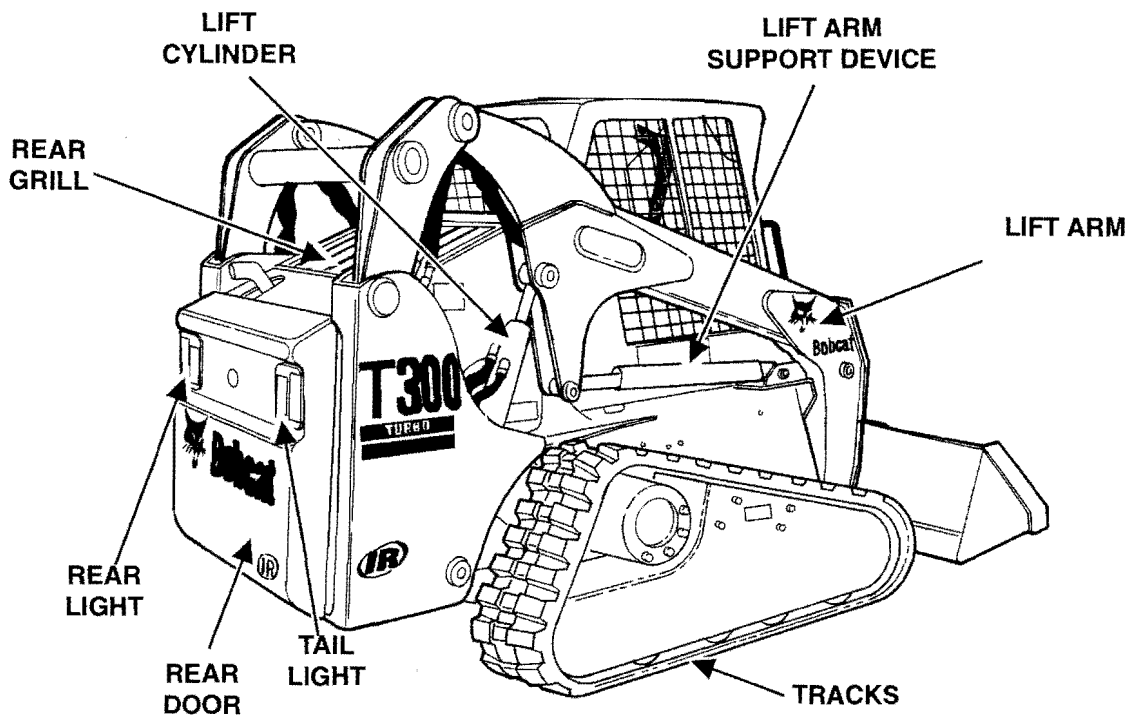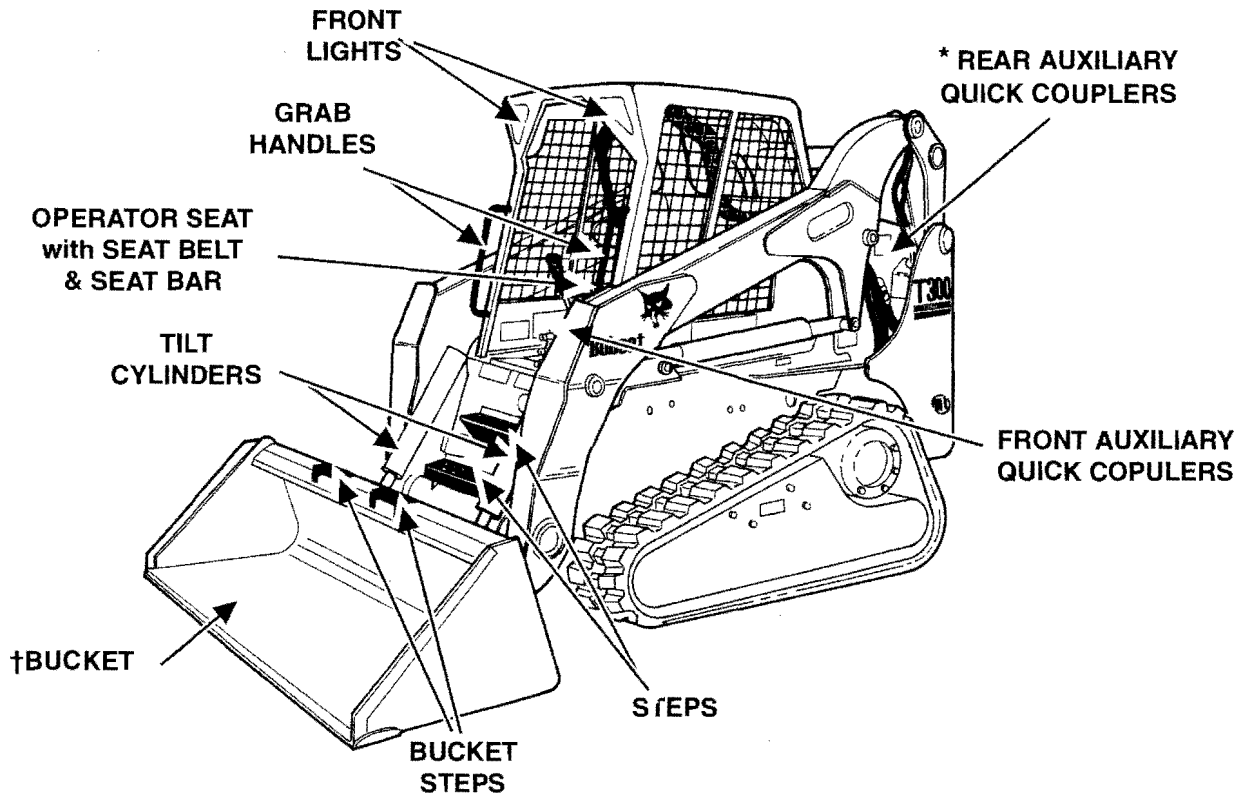

B-16951a
B-16950

* Option or Field Accessory
† Many buckets and other attachments are available.



Bobcat®

SAFETY AND MAINTENANCE

SAFETY & MAINTENANCE

AIR CLEANER SERVICE	10-70-1
Replacing Filter Element	10-70-1
BOB-TACH	10-130-1
Inspection And Maintenance	10-130-1
ENGINE COOLING SYSTEM	10-80-1
Cleaning Cooling System	10-80-1
ENGINE LUBRICATION SYSTEM	10-100-1
Checking Engine Oil	10-100-1
Oil Chart	10-100-1
Replacing Oil And Filter	10-100-1
FAN GEARBOX	10-120-1
Checking And Adding Oil	10-120-1
FUEL SYSTEM	10-90-1
Filling The Fuel Tank	10-90-1
Fuel Filter	10-90-2
Fuel Specifications	10-90-1
Removing Air From The Fuel System	10-90-2
HYDRAULIC/HYDROSTATIC SYSTEM	10-110-1
Checking And Adding Fluid	10-110-1
Hydraulic/Hydrostatic Filter Replacement	10-110-1
Replacing Hydraulic Fluid And Case Drain Filters	10-110-2
LIFT ARM SUPPORT DEVICE	10-20-1
Installing The Lift Arm Support Device	10-20-1
Removing The Lift Arm Support Device	10-20-2
LIFTING AND BLOCKING THE LOADER	10-10-1
Procedure	10-10-1
LUBRICATING THE LOADER	10-140-1
Procedure	10-140-1
OPERATOR CAB	10-30-1
Description	10-30-1
Emergency Exit	10-30-2
Lowering The Operator Cab	10-30-2
Raising The Operator Cab	10-30-1

Continued On Next Page

SAFETY AND MAINTENANCE (CONT'D)

POWER BOB-TACH	10-131-1
Inspection And Maintenance	10-131-1
REMOTE START	10-50-1
Procedure	10-50-3
Procedure For Loader With Attachments Control Harness	10-50-2
Procedure For Loader W/O Attachments Control Harness	10-50-1
SERVICE SCHEDULE	10-60-1
Chart	10-60-1
TRANSPORTING THE BOBCAT LOADER	10-40-1
Procedure	10-40-1

TIGHTEN ALL HARDWARE PER SIZE TO GRADE 5 TORQUE (SEE STANDARD TORQUE SPECIFICATIONS FOR BOLTS, SECTION SPEC-01) UNLESS OTHERWISE SPECIFIED.

LIFTING AND BLOCKING THE LOADER

Procedure

Figure 10-10-1



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

Read the Removal & Installation, Disassembly & Assembly, etc. completely to become familiar with the procedure before beginning [Figure 10-10-1].


Always park the loader on a level surface.

WARNING

Put jackstands under the front axles and rear corners of the frame before running the engine for service. Failure to use jackstands can allow the machine to fall or move and cause injury or death.


W-2017-0286

 Figure 10-10-2

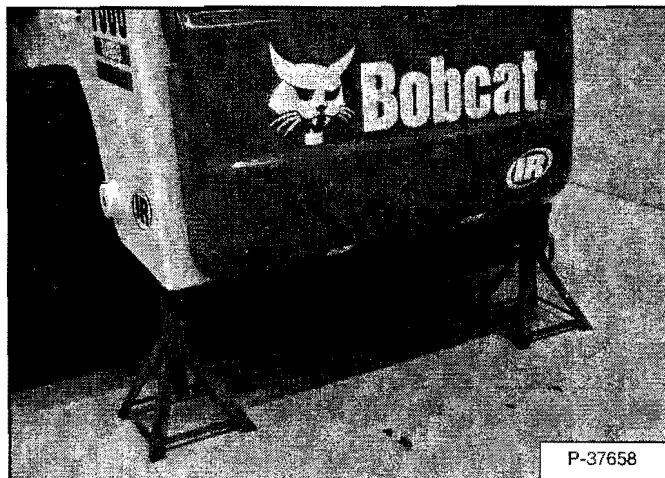

Lift the rear of the loader and install jackstands [Figure 10-10-2].

 Figure 10-10-3

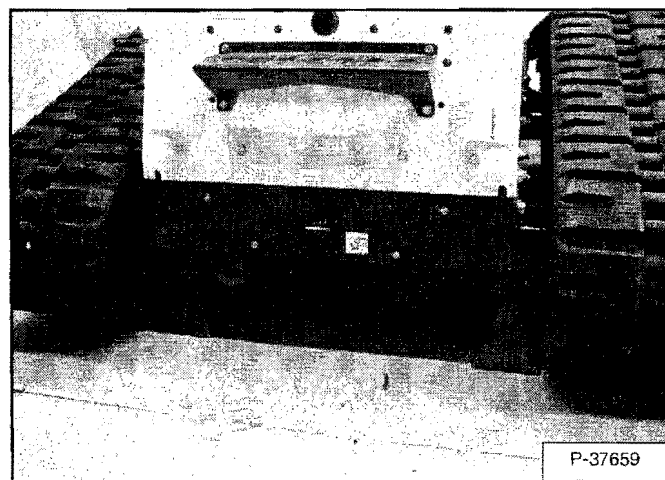

Lift the front of the loader and put jackstands under the axle tubes [Figure 10-10-3].

NOTE: Make sure the jackstands do not touch the tracks.




Bobcat®

LIFT ARM SUPPORT DEVICE

Installing The Lift Arm Support Device

 Figure 10-20-1

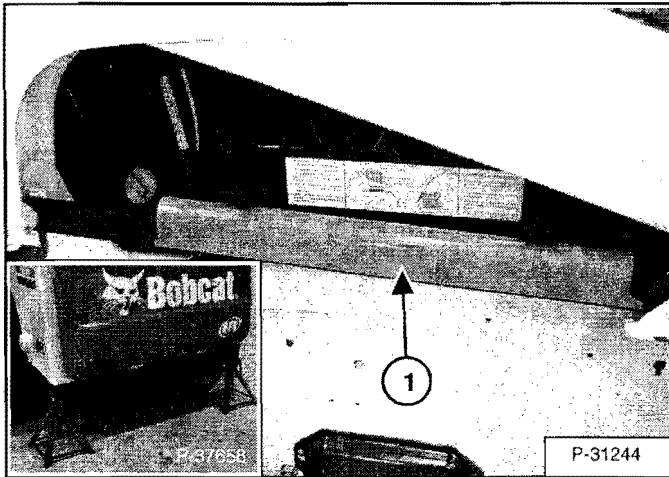

! WARNING

 
Never work on a machine with the lift arms up unless the lift arms are secured by an approved lift arm support device. Failure to use an approved lift arm support device can allow the lift arms or attachment to fall and cause injury or death.

W-2059-0598

! WARNING

Service lift arm support device if damaged or if parts are missing. Using a damaged lift arm support or with missing parts can cause lift arms to drop causing injury or death.

W-2271-1197
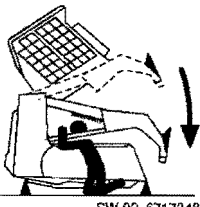
<h2>! DANGER</h2> <p>AVOID DEATH</p> <ul style="list-style-type: none">• Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop.• Keep out of this area when lift arms are raised unless supported by an approved lift arm support. Replace if damaged. 57051	
--	---


Put jackstands under the rear corners of the loader frame (Inset) [Figure 10-20-1].

Remove the lift arm support device (Item 1) [Figure 10-20-1] from the storage position.

The operator must stay in the operator seat with the seat belt fastened and the seat bar lowered, until the lift arm support device is installed.

Start the engine and raise the lift arms all the way up.

 Figure 10-20-2

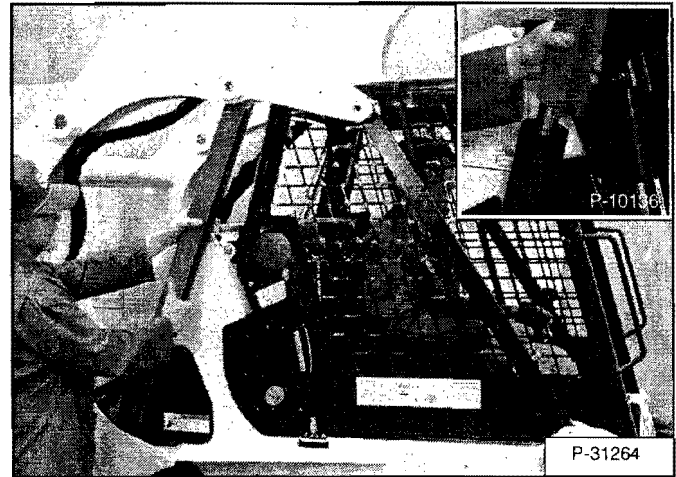


Have a second person install the lift arm support device over the rod of one of the lift cylinders [Figure 10-20-2].

The lift arm support device must be tight against the cylinder rod. The tabs of the lift arm support device must be under the cylinder as shown (Inset) [Figure 10-20-2].

LIFT ARM SUPPORT DEVICE (CONT'D)

Installing The Lift Arm Support Device (Cont'd)

 Figure 10-20-3

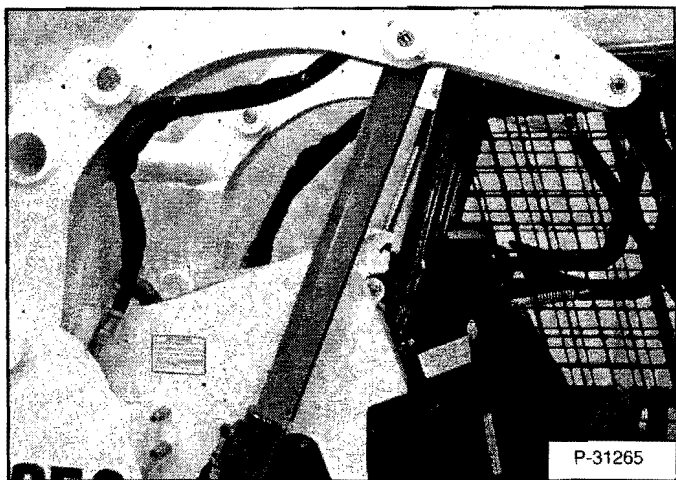

Lower the lift arms slowly until the lift arm support device is held between the lift arms and lift cylinder [Figure 10-20-3].

Removing The Lift Arm Support Device

The operator must be in the operator's seat, with the seat belt fastened and seat bar lowered, until the lift arm support device is removed and the lift arms are lowered all the way.

Start the engine, raise the lift arms all the way up.

Have a second person remove the lift arm support device.

Lower the lift arms all the way and stop the engine.

Return the lift arm support device to storage position and secure with clamping knobs.

Remove the jackstands.

Please click here and go
back to our website.

BUY NOW

Then Instant Download the
Complete Manual.

Thank you very much!