


773



Bobcat®

Service Manual

**(773 S/N 509635001 & Above)
(773 Europe Only S/N 509616001–509634999)**

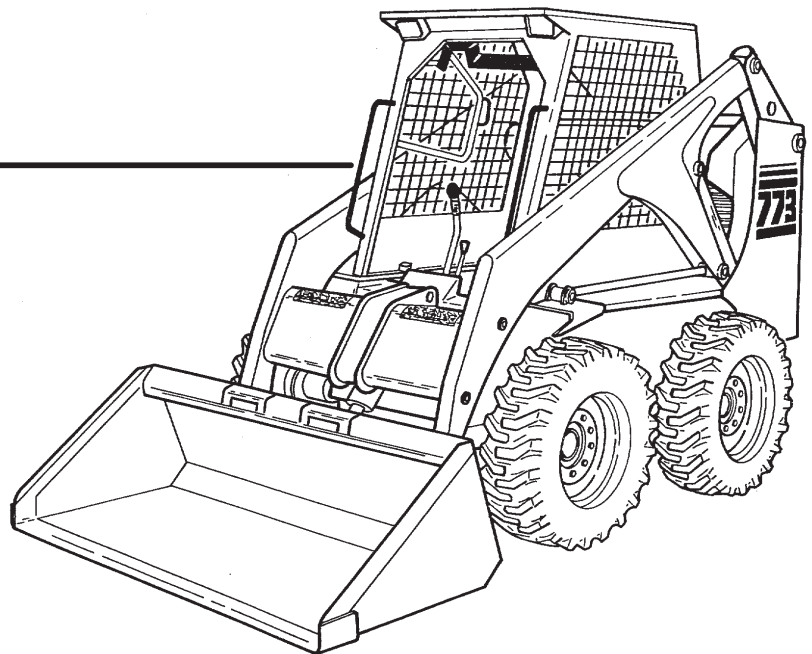

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

6900092(6-97)



Printed in U.S.A.

© Bobcat Company 1997

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

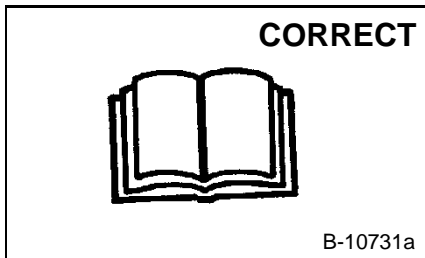


Never service the Bobcat Skid-Steer Loader without instructions.

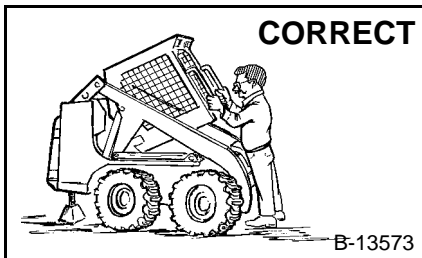


Use the correct procedure to lift or lower operator cab.

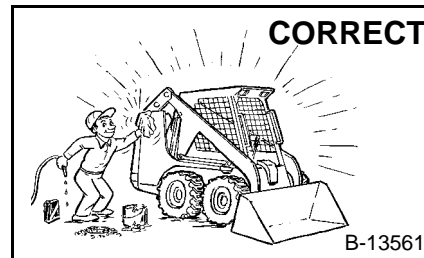


Cleaning and maintenance are required daily.

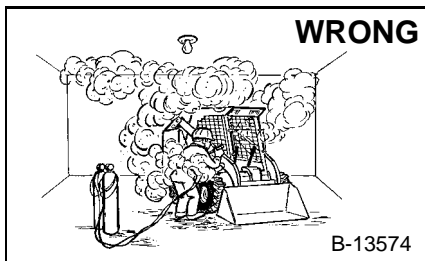


- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

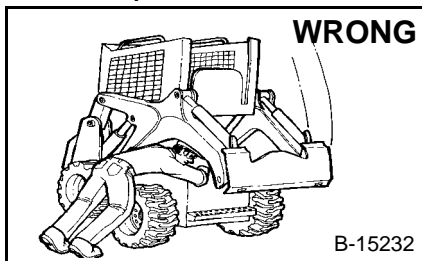


Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

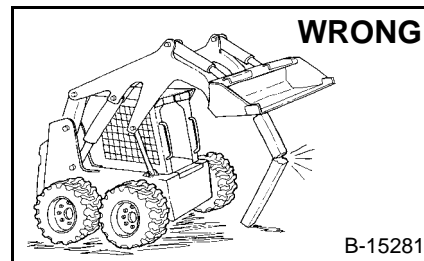

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

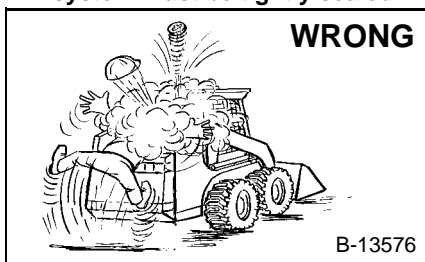

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

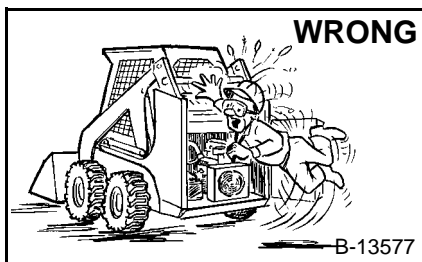

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

ACTUATOR VOLTAGE TEST	10-1	IDLER GEAR AND CAMSHAFT	7-1
AHC COMPONENTS	10-1	LIFT ARM LINK	5-1
AHC/PWM CONTROLLER	10-1	LIFT ARMS	5-1
AIR CLEANER	7-1	LIFT ARM SUPPORT DEVICE	1-1
AIR CLEANER SERVICE	1-1	LIFT CYLINDER(S)	2-1
ALTERNATOR	6-1	LIFT LOCK BY-PASS VALVE	2-1
ALTERNATOR BELT	1-1	LIFTING AND BLOCKING THE LOADER	1-1
AXLE SEAL	4-1	LIFTING THE LOADER	1-1
AXLE, SPROCKET AND BEARINGS	4-1	LOADER SPECIFICATIONS	9-1
BATTERY	6-1	LUBRICATION OF THE BOBCAT LOADER	1-1
BICS™ SYSTEM CONTROLLER	8-1	MAIN RELIEF VALVE	2-1
BICS™ VALVE	2-1, 10-1	MONITOR SERVICE CODES	8-1
BLOWER HOUSING/FAN GEARBOX	7-1	MOTOR CARRIER	4-1
BOBCAT INTERLOCK		OIL COOLER	3-1
CONTROL SYSTEM (BICS™)	8-1, 10-1	OIL PUMP	7-1
BOB-TACH	1-1, 5-1	OPERATOR CAB	1-1, 5-1
BOSS® DIAGNOSTIC TOOL	8-1	OPERATOR CAB GAS CYLINDER	5-1
BOSS® INSTRUMENT PANEL	8-1	OPERATOR SEAT	5-1
CHAINCASE COVERS	4-1	OPERATION SENSING SYSTEM UNIT	8-1
CHAINCASE FLUID	4-1	PARKING BRAKE	4-1
CONTROL HANDLE (ADVANCED HAND		PARKING BRAKE DISC	4-1
CONTROL) (AHC)	10-1	PISTON AND CONNECTING ROD	7-1
CONTROL HANDLE (ADVANCED HAND		PIVOT PINS	1-1
CONTROL) (AHC) (W/PUSH BUTTON FLOAT)	10-1	RADIATOR	7-1
CONTROL INTERLOCK LINKAGE	2-1	REAR DOOR	5-1
CONTROL PANEL	3-1	REAR GRILL	5-1
CONTROL PEDALS	2-1	REAR LIGHTS	5-1
CONTROL VALVE	2-1	RELAY SWITCHES	6-1
CRANKSHAFT AND BEARINGS	7-1	REMOTE START SWITCH	1-1
CRANKSHAFT GEAR	7-1	ROCKER ARM AND SHAFT	7-1
CYLINDER BORE	7-1	RPM SENSOR	8-1
CYLINDER HEAD	7-1	SEAT BAR (W/COMPRESSION SPRINGS)	5-1
DECIMAL & MILLIMETER EQUIVALENTS	9-1	SEAT BAR (W/GAS CYLINDER)	5-1
DRIVE BELT	1-1	SEAT BAR RESTRAINT SYSTEM	1-1
DRIVE BELT HOUSING	3-1	SEAT BAR SENSOR	8-1
DRIVE CHAIN	4-1	SEAT SENSOR	8-1
ELECTRICAL/HYDRAULIC		SENDER AND SENSOR	8-1
CONTROLS REFERENCE	8-1	SERVICE SCHEDULE	1-1
ELECTRICAL SYSTEM INFORMATION	6-1	SPARK ARRESTOR MUFFLER	1-1
ENGINE	7-1	SPRING LOADED DRIVE BELT	
ENGINE COMPRESSION	7-1	TENSIONER PULLEY	3-1
ENGINE COOLING SYSTEM	1-1	STANDARD INSTRUMENT PANEL	6-1
ENGINE LUBRICATION SYSTEM	1-1	STANDARD TORQUE SPECIFICATIONS	
ENGINE MUFFLER	7-1	FOR BOLTS	9-1
ENGINE SPECIFICATIONS	9-1	STARTER	6-1
ENGINE SPEED CONTROL	7-1	STOPPING THE BOBCAT LOADER	1-1
FAN GEARBOX	1-1, 7-1	STEERING LINKAGE	3-1
FINAL DRIVE TRANSMISSION (CHAINCASE)	1-1	SWITCH HANDLE	10-1
FIXED DRIVE BELT TENSIONER PULLEY	3-1	TILT CYLINDER	2-1
FLYWHEEL	7-1	TILT LOCK VALVE	2-1
FRONT LIGHTS	6-1	TIMING GEARS	7-1
FUEL CAMSHAFT	7-1	TIMING GEARCASE COVER	7-1
FUEL INJECTION NOZZLES	7-1	TIRE MAINTENANCE	1-1
FUEL INJECTION PUMP	7-1	TORQUE SPECIFICATIONS FOR LOADER	9-1
FUEL SYSTEM	1-1	TOWING THE LOADER	1-1
FUEL TANK	5-1	TRACTION LOCK	8-1
GLOW PLUGS	7-1	TRACTION LOCK GUIDES	4-1
HANDLE CONTROL UNIT TEST	10-1	TRANSPORTING THE LOADER	1-1
HYDRAULIC CONNECTION SPECIFICATIONS	9-1	TROUBLESHOOTING	2-1, 3-1, 6-1, 7-1, 10-1
HYDRAULIC CONTROL VALVE	10-1	TROUBLESHOOTING	
HYDRAULIC CYLINDER IDENTIFICATION	2-1	THE BOSS® & L.C.D. DISPLAY	8-1
HYDRAULIC CYLINDERS	2-1	U.S. TO METRIC CONVERSION	9-1
HYDRAULIC FILTER HOUSING	2-1	VALVE CLEARANCE	7-1
HYDRAULIC FLUID RESERVOIR	2-1	VALVE, VALVE SEAT AND GUIDE	7-1
HYDRAULIC/HYDROSTATIC		WATER PUMP	7-1
FLUID SPECIFICATIONS	9-1		
HYDRAULIC/HYDROSTATIC SYSTEM	1-1		
HYDRAULIC PUMP	2-1		
HYDRAULIC SYSTEM INFORMATION	2-1		
HYDROSTATIC DRIVE MOTOR	3-1		
HYDROSTATIC MOTOR 30 SERIES	3-1		
HYDROSTATIC PUMP	3-1		
HYDROSTATIC SYSTEM INFORMATION	3-1		



CONTENTS

FOREWORD	ii
SAFETY INSTRUCTIONS	v
SERIAL NUMBER LOCATIONS	vii
DELIVERY REPORT	vii
BOBCAT LOADER IDENTIFICATION	viii
PREVENTIVE MAINTENANCE	1-1
HYDRAULIC SYSTEM	2-1
HYDROSTATIC SYSTEM	3-1
DRIVE SYSTEM	4-1
MAIN FRAME	5-1
ELECTRICAL SYSTEM	6-1
ENGINE SERVICE	7-1
SYSTEMS ANALYSIS	8-1
SPECIFICATIONS	9-1
ADVANCED HAND CONTROL SYSTEM	10-1

**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its
constituents are known to the State of California
to cause cancer, birth defects and other
reproductive harm.

**PREVENTIVE
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

**MAIN
FRAME**

**ELECTRICAL
SYSTEM**

**ENGINE
SERVICE**

**SYSTEMS
ANALYSIS**



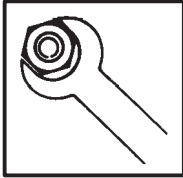

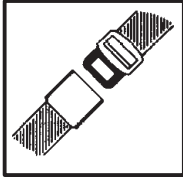

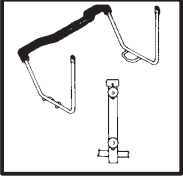
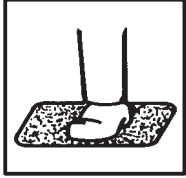
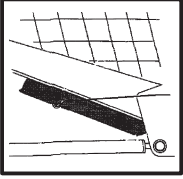
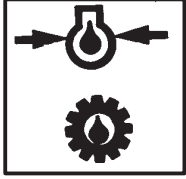

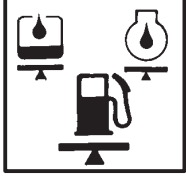
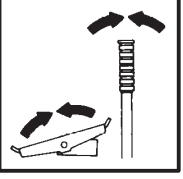



SPECIFICATIONS

**ADVANCED
HAND CONTROL
SYSTEM**


FOREWORD

This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

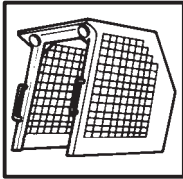
A general inspection of the following items must be made after the loader has had service or repair:

- | | | | |
|---|---|--|---|
| 1. Check that the ROPS/FOPS (Including sidescreens) is in good condition and is not modified. |  | 9. The parking brake must function correctly. |  |
| 2. Check that ROPS mounting hardware is tightened and is Melroe approved. |  | 10. Enclosure door latches must open and close freely. |  |
| 3. The seat belt must be correctly installed, functional and in good condition. |  | 11. Bob-Tach wedges and linkages must function correctly and be in good condition. |  |
| 4. The seat bar and pedal interlocks must be correctly adjusted, clean and lubricated. |  | 12. Safety treads must in good condition. |  |
| 5. Check lift arm support device, replace if damaged. |  | 13. Check for correct function of indicator lamps (Optional on some models). |  |
| 6. Machine signs must be legible and in the correct location. |  | 14. Check hydraulic fluid level, engine oil level and fuel supply. |  |
| 7. Steering levers and foot pedals must return to neutral. |  | 15. Inspect for fuel, oil or hydraulic fluid leaks. |  |
| 8. Check for correct function of the work lights. |  | 16. Lubricate the loader. |  |


17. Check the condition of the battery and cables.

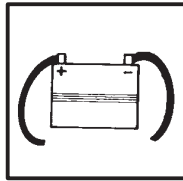


18. Inspect the air cleaner for damage or leaks. Check the condition of the element.

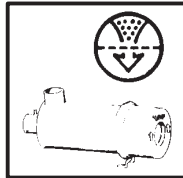


19. Check the electrical charging system.

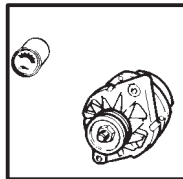


20. Check tires for wear and pressure.

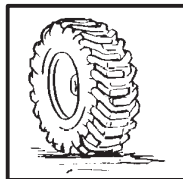

21. Inspect for loose or broken parts or connections.

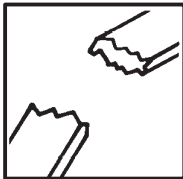


22. Operate the loader and check all functions.

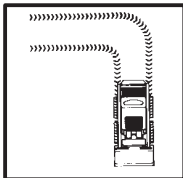


23. Check for any field modification not completed.



24. Check for correct function of the Bobcat Interlock Control System (BICS™) before the machine is returned to the customer.

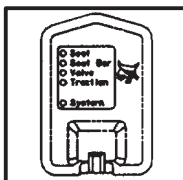

Recommend to the owner that all necessary corrections be made before the machine is returned to service.

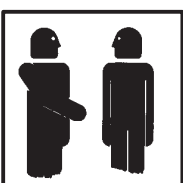



SAFETY INSTRUCTIONS


WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199

The following publications provide information on the safe use and maintenance of the loader and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the loader gives operating information as well as routine maintenance and service procedures. It is a part of the loader and must stay with the machine when it is sold. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat loader dealer.
- The loader has machine signs (decals) which instruct on the safe operation and care. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat loader dealer.
- The loader has a plastic Operator's Handbook fastened to the operator cab. Its brief instructions are convenient to the operator. The Handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The EMI Safety Manual (available in Spanish) delivered with the loader gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Skid-Steer Loader Operator Training Course is available through your local dealer. This course is intended to provide rules and practices for correct operation of the Bobcat loader. The course is available in English and Spanish version.
- The Service Safety Training Course is available from your Bobcat dealer. This course provides information for safe and correct service procedures for Bobcat Skid-Steer loaders.
- The Bobcat Skid-Steer Loader Safety Video is available from your Bobcat Dealer.

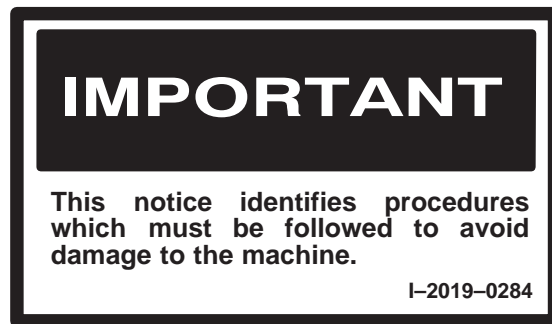

Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

FIRE PREVENTION

The loader has several components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase the fire hazard. The loader must be cleaned as often as necessary to avoid this accumulation. Flammable debris in the engine compartment is a fire hazard when the loader is parked with a hot engine.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the Bobcat loader where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on this engine. It has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the loader and disconnect the battery before doing any welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the loader when welding. Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. No smoking!
- Use the procedure in the Operation & Maintenance Manual for connecting the battery.
- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler.
- Know where fire extinguishers and first aid kits are located and how to use them.

A fire extinguisher is available from your Bobcat dealer. The fire extinguisher can be installed in the location shown [A].




SERIAL NUMBER LOCATIONS

Always use the serial number of the loader when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

LOADER SERIAL NUMBER

The loader serial number plate is located on the inside of the left upright, above the grill **[A]**.

Explanation of loader Serial Number:

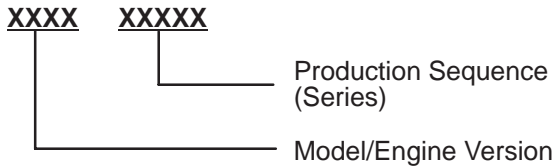


The four digit Model/Engine Combination module number identifies the model number and engine combination.

The five digit Production Sequence Number identifies the order which the loader is produced.

ENGINE SERIAL NUMBER


The serial number (Item 1) **[B]** is located on the engine block between engine oil fill and the injection pump.

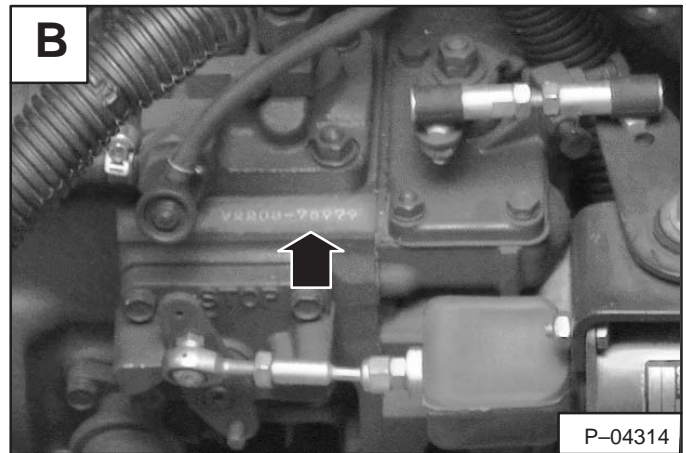

DELIVERY REPORT

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader is delivered. The form contents must be explained to the owner. Make sure it is filled out completely **[C]**.

BOBCAT LOADER IDENTIFICATION

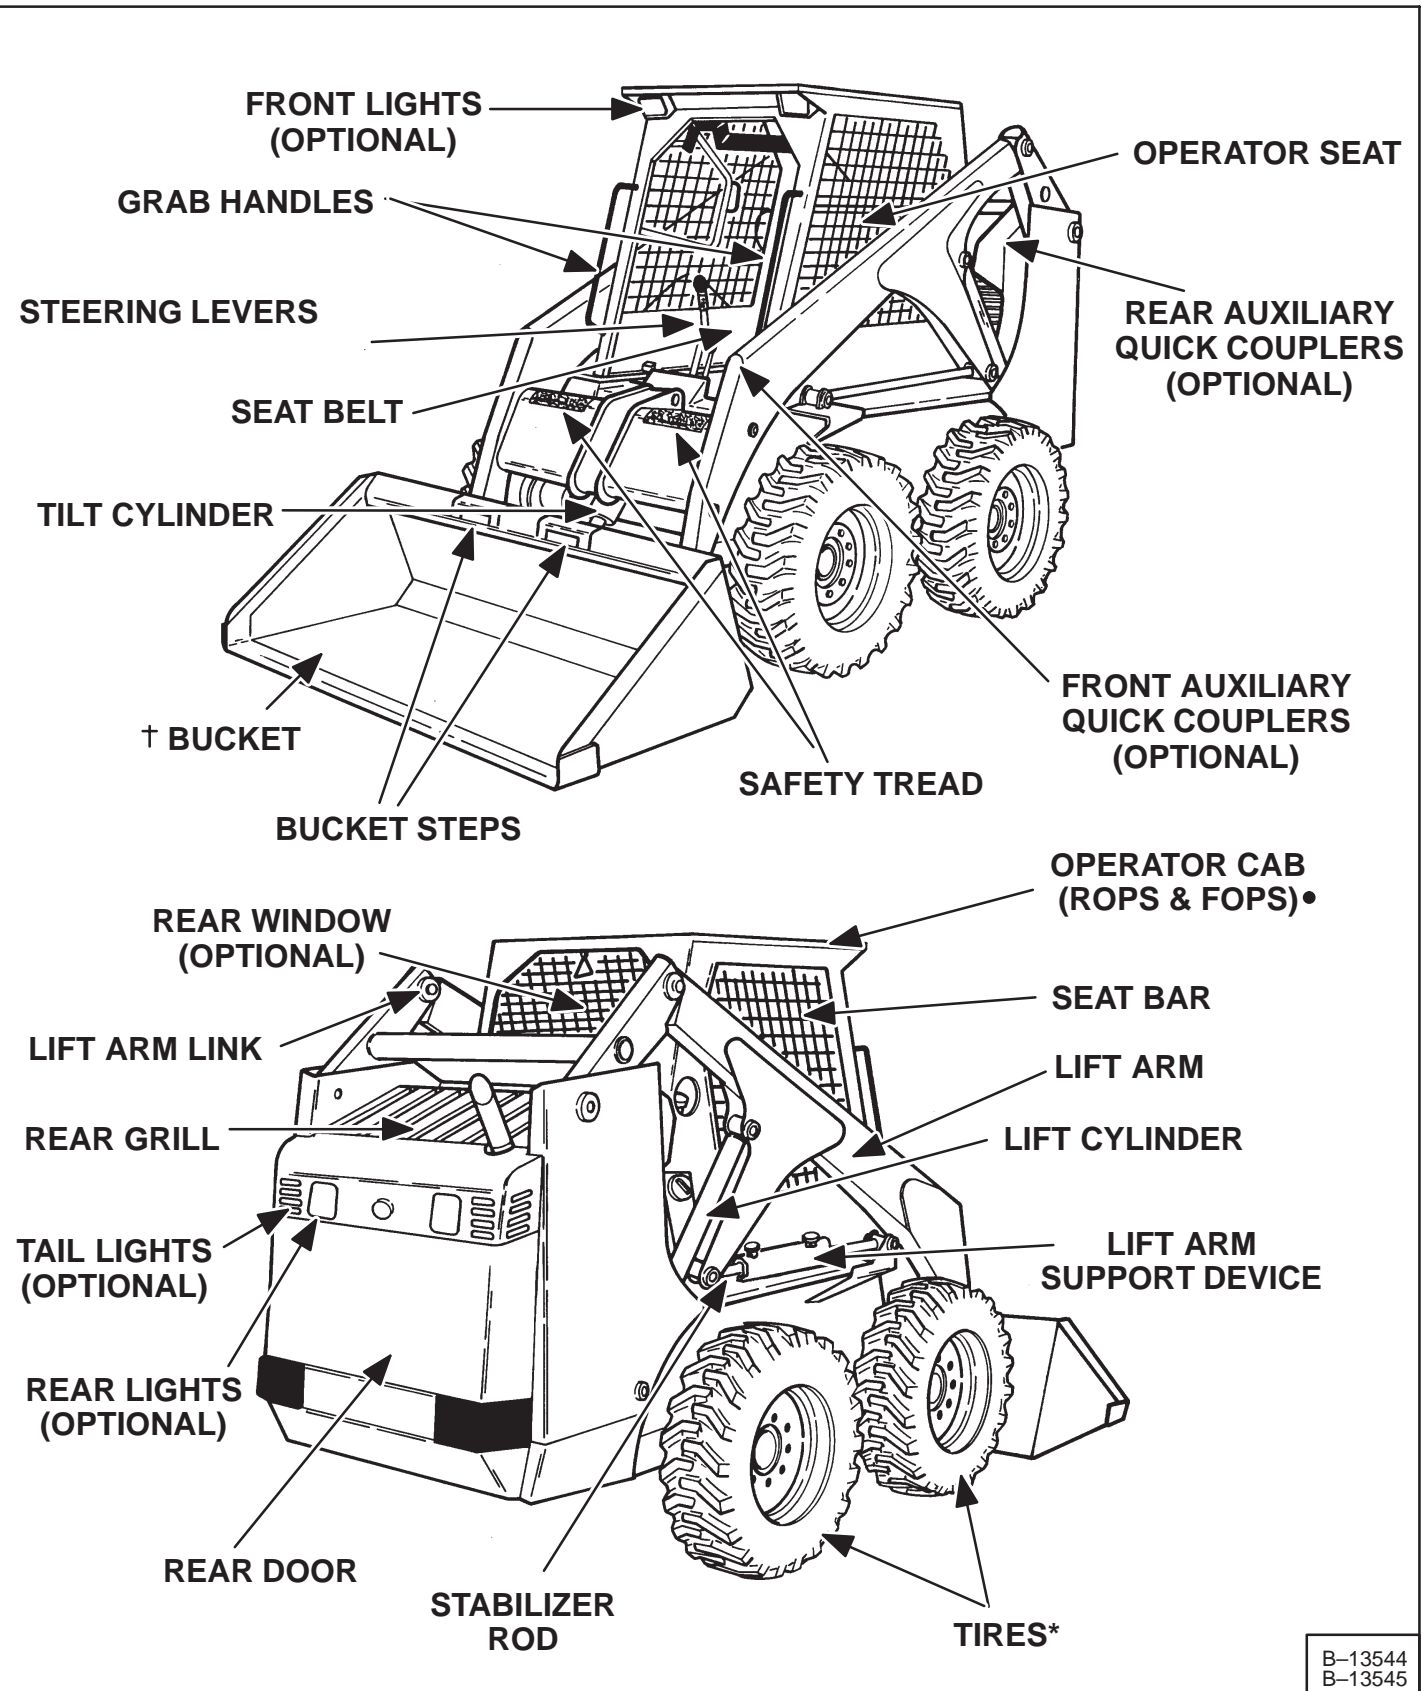

B-13544
B-13545

- * TIRES – The Bobcat loader is factory equipped with heavy duty flotation tires. See 773 Series Equipment for available optional tires.
- † BUCKET – Several different buckets and other attachments are available for the Bobcat loader.
- ROPS, FOPS – Roll Over Protective Structure per SAE J1040 and ISO 3471, and Falling Object Protective Structure per SAE J1043 and ISO 3449, Level I. Level II is available. The Bobcat loader is base-equipped with a standard operator cab as shown. Extra insulated cab is available as an option (Reduced noise level).

PREVENTIVE MAINTENANCE

PREVENTIVE MAINTENANCE

	Page Number
AIR CLEANER SERVICE	
Replacing Filter Element	1-14
ALTERNATOR BELT	
Adjustment	1-22
BOB-TACH	
Inspection And Maintenance	1-36
DRIVE BELT	
Adjusting The Drive Belt Equipped With The Fixed Drive Idler	1-29
Adjusting The Drive Belt Equipped With The Spring Loaded Drive Idler	1-31
Drive Belt Replacement	1-32
ENGINE COOLING SYSTEM	
Cleaning The Cooling System	1-20
Checking The Coolant Level	1-20
Replacing The Coolant	1-21
ENGINE LUBRICATION SYSTEM	
Checking Engine Oil	1-18
Replacing Oil And Filter	1-18
FAN GEARBOX	
Checking And Maintaining	1-22
FINAL DRIVE TRANSMISSION (CHAINCASE)	
Checking And Adding Oil	1-28
Removing Oil From The Chaincase	1-28
FUEL SYSTEM	
Filling The Fuel Tank	1-16
Fuel Filter	1-16
Fuel Specifications	1-16
Removing Air From The Fuel System	1-17
HYDRAULIC/HYDROSTATIC SYSTEM	
Breather Cap	1-25
Checking And Adding Fluid	1-23
Replacing Hydraulic/Hydrostatic Filter	1-23
Replacing Hydraulic Fluid	1-24
LIFT ARM SUPPORT DEVICE	
Installing Lift Arm Support Device	1-7
Removing Lift Arm Support Device	1-7
LIFTING AND BLOCKING THE LOADER	
Procedure	1-4
LIFTING THE LOADER	
Single Point Lift	1-6
LUBRICATION OF THE BOBCAT LOADER	
Procedure	1-33

Continued On Next Page

PREVENTIVE MAINTENANCE (Cont'd)

	Page Number
OPERATOR CAB	
Description	1-8
Lowering The Operator Cab	1-10
Raising The Operator Cab	1-9
Emergency Exit	1-8
PIVOT PINS	1-35
REMOTE START SWITCH	
Procedure	1-37
SEAT BAR RESTRAINT SYSTEM (Advanced Hand Controls)	
Description	1-13
Seat Bar Inspection	1-13
Seat Bar Maintenance	1-13
SEAT BAR RESTRAINT SYSTEM (Foot Pedals)	
Description	1-11
Seat Bar Inspection	1-11
Seat Bar Maintenance	1-11
SEAT BAR RESTRAINT SYSTEM (Mechanical Hand Controls)	
Description	1-12
Seat Bar Inspection	1-12
Seat Bar Maintenance	1-12
SERVICE SCHEDULE	
Chart	1-3
SPARK ARRESTOR MUFFLER	
Cleaning Procedure	1-26
STOPPING THE BOBCAT LOADER	1-6
TIRE MAINTENANCE	
Tire Mounting	1-27
Tire Rotation	1-27
Wheel Nuts	1-27
TOWING THE LOADER	
Procedure	1-5
TRANSPORTING THE LOADER	
Procedure	1-5

SERVICE SCHEDULE

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Bobcat loader.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199

SERVICE SCHEDULE		HOURS					
ITEM	SERVICE REQUIRED	8-10	50	100	250	500	1000
Engine Oil	Check the oil level and add oil as needed.						
Engine Air Filter and Air System	Check condition indicator or display panel. Service only when required. Check for leaks and damaged components.						
Engine Cooling System	Clean debris from oil cooler, radiator and grill. Check coolant level in recovery tank (engine cold). Add coolant as needed.						
Tires	Check for damaged tires and correct air pressure.						
Seat Belt, Seat Bar, Foot Pedal or Hand Control Interlocks	Check the condition of seat belt. Check the seat bar, and foot pedal interlocks or hand control interlocks. Clean dirt and debris from moving parts.						
Safety Signs and Safety Tread	Check for damaged signs (decals) and safety tread. Replace any signs or safety treads that are damaged or worn.						
Indicators & Lights (Opt.)	Check for correct operation of all indicators & lights.						
Operator Cab	Check the fastening bolts, washers & nuts. Check the condition of cab.						
Lift Arms, Cyl., Bob-Tach Pivot Pins and Wedges	Lubricate with multi-purpose lithium based grease.						
Fuel Filter	Remove the trapped water.						
Bobcat Interlock Control System (BICS™)	Check BICS™ functions. Clean dirt, debris or objects from under and behind seat and around brake pedal as required.						
Hydraulic Fluid, Hoses and Tubelines	Check fluid level and add as needed. Check for damage and leaks. Repair or replace as needed.						
Final Drive Trans.(Chaincase)	Check oil level.						
Foot Pedals, Hand Controls, and Steering Levers	Check for correct operation. Repair or adjust as needed.						
Wheel Nuts	<input type="checkbox"/> Check for loose wheel nuts and tighten to 105–115 ft.-lbs. (142–156 Nm) torque.						
Parking Brake	Check operation.						
Spark Arrestor Muffler	Clean the spark chamber.						
Battery	Check cables, connections and electrolyte level. Add distilled water as needed						
Steering Shaft	Grease two fittings.						
Engine/Hydros. Drive Belt	* Check for wear or damage. Adjust as needed.						
Fan Drive Gearbox	Check gear lube level. Add as needed.						
Alternator Belt	Check belt tension and adjust as needed.						
Engine Oil and Filter	† Replace oil and filter. Use CD or better grade oil and Melroe filter.						
Fuel Filter	Replace the filter element.						
Hydraulic Reservoir Breather Cap	Replace the reservoir breather cap.						
Hydraulic Reservoir	Replace the fluid.						
Final Drive Trans.(Chaincase)	Replace the fluid.						
Hydraulic/Hydrostatic Filter	• Replace the filter element.						
Case Drain Filters	Replace the filters.						
Bobcat Interlock Control System (BICS™)	Check lift arm bypass control						

Check wheel nut torque every 8 hours for the first 24 hours.

• Replace filter element after the first 50 hours and when the transmission warning light comes ON.

■ Or every 12 months.

* Inspect the new belt after first 50 hours.

† First oil and filter change must occur at 50 hours; 250 hours thereafter.

WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death [A].

W-2003-0199

LIFTING AND BLOCKING THE LOADER

Procedure

Always park the loader on a level surface.

WARNING

Put jackstands under the front axles and rear corners of the frame before running the engine for service. Failure to use jackstands can allow the machine to fall or move and cause injury or death.

W-2017-0286

Put the floor jack under the rear of the loader [B].

Lift the rear of the loader and install jackstands [B].

Put the floor jack under the front the loader [C].

Lift the front of the loader and put jackstands under the axle tubes [C].

NOTE: Make sure the jackstands do not touch the tires.

A




B-07023

B



P-03869

C

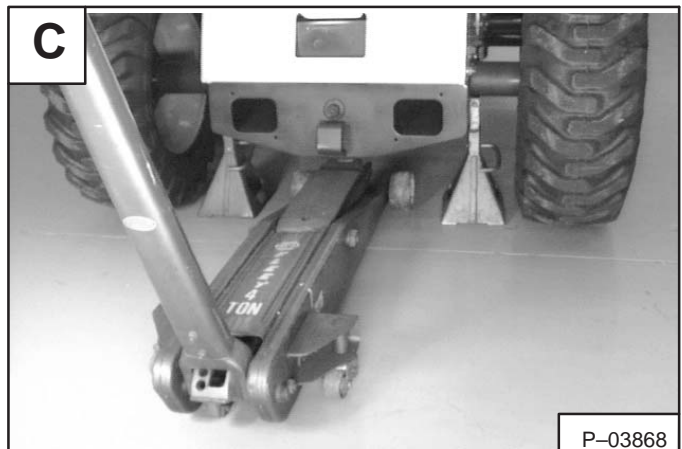

P-03868

TRANSPORTING THE BOBCAT LOADER

WARNING

Adequately designed ramps of sufficient strength are needed to support the weight of the machine when loading onto a transport vehicle. Wood ramps can break and cause personal injury.

W-2058-0494

A loader with an empty bucket or no attachment must be loaded backward onto the transport vehicle [A].

Be sure the transport and towing vehicles are of adequate size and capacity (See *SPECIFICATIONS* Page 9-1, for weight of loader.).

The rear of the trailer must be blocked or supported [A] when loading or unloading the loader to prevent the front end of the trailer from raising up.

Use the following procedure to fasten the Bobcat loader to the transport vehicle to prevent the loader from moving during sudden stops or when going up or down slopes [B].

- Lower the bucket or attachment to the floor.
- Stop the engine.
- Engage the parking brake.
- Install chains at the front and rear loader tie down positions (Inset [B]).
- Fasten each end of the chain to the transport vehicle.


TOWING THE LOADER

To prevent damage to the loader's hydrostatic system, the loader must be towed only a short distance at slow speed. (Example: Moving the loader onto a transport vehicle).

The towing chain (or cable) must be rated at 1 & 1/2 times the weight of the loader. (See *SPECIFICATIONS* Page 9-1.)

- Turn the key switch to ON and press the traction lock override button.
- Tow the Bobcat at 2 MPH (3,2 km/hr) or less for not more than 25 feet (7,6 meters).

If the electrical system is not functioning part of the brake system must be disassembled to move the loader. (See *TRACTION LOCK* Removal and Installation procedure Page 8-1.)

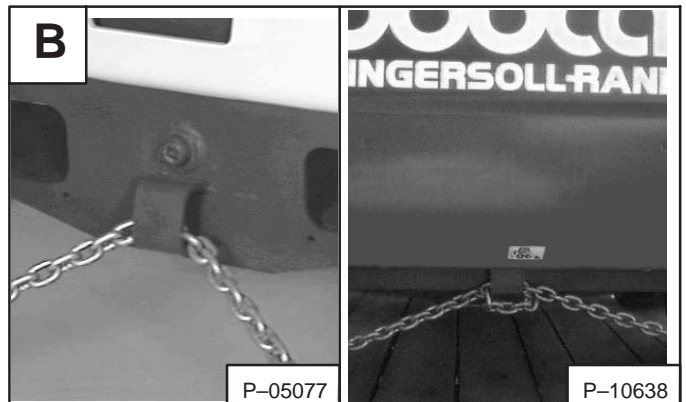

LIFTING THE LOADER


Single Point Lift

! **WARNING**

AVOID INJURY OR DEATH

- Before lifting, check fasteners on single point lift and operator cab.
- Assemble front cab fasteners as shown in this manual.
- Never allow riders in the cab or bystanders within 15 feet (5 meters) while lifting the machine.

W-2007-0497

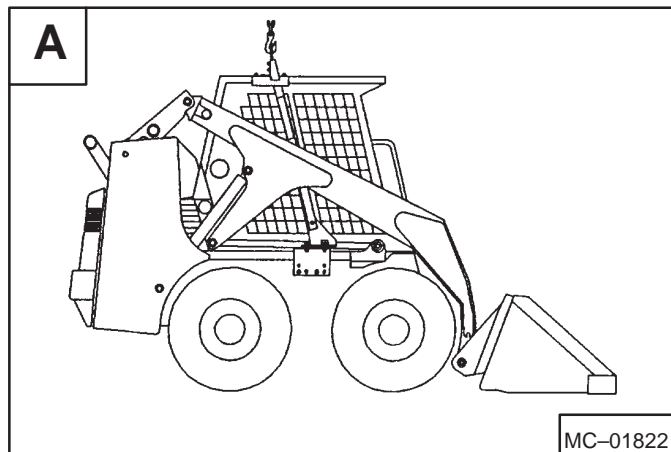

The loader can also be lifted with the single point lift which is available as a kit from your Bobcat loader dealer.

Install the kit and lift as shown [A].

The single point lift, supplied by Bobcat Company is designed to lift and support the Bobcat loader without affecting roll over and falling object protection features of the operator cab.

STOPPING THE BOBCAT LOADER

When the steering levers are moved to the neutral position, the hydrostatic transmission will act as a *service brake* and stop the loader.

Please click here and go
back to our website.

BUY NOW

Then Instant Download the
Complete Manual.

Thank you very much!